


## Cat.6/Cat.5e connection Box Surface Mount Installing Instruction



Stripper, Punch down, Tongs Tool.



T568B	T568A
Pin 1 White / Orange	Pin 1 White / Green
Pin 2 Orange	Pin 2 Green
Pin 3 White / Green	Pin 3 White / Orange
Pin 4 Blue	Pin 4 Blue
Pin 5 White / Blue	Pin 5 White / Blue
Pin 6 Green	Pin 6 Orange
Pin 7 White / Brown	Pin 7 White / Brown
Pin 8 Brown	Pin 8 Brown

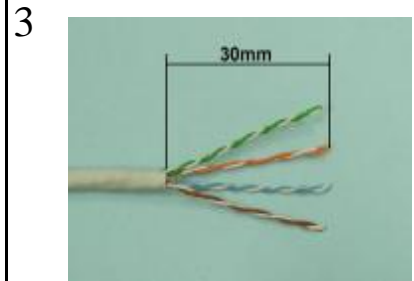

To strip the PVC Jacket in 30mm, and separate to 4 pair each.



Surface mount wall box contain housing, module & central small plate.



Separate frame from base housing.




Follow the direction on the color coding to position T568B or T568A wiring, separate a little space on proper position and insert the 4 pair wires into the slot, **then keep the twist as near IDC as possible.**



Use a punch down tool to complete the termination and cut off any access wire.



There are 6 cable entries on frame.

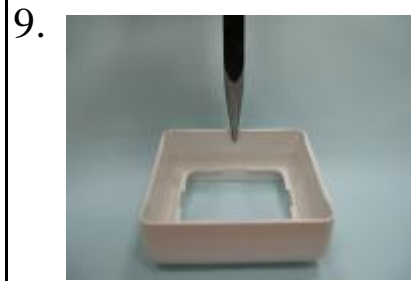

Using tongs to tear off plastic for cable entry.



After tear off cable entry hole.



Put frame on base housing again.



Push down central cover.